


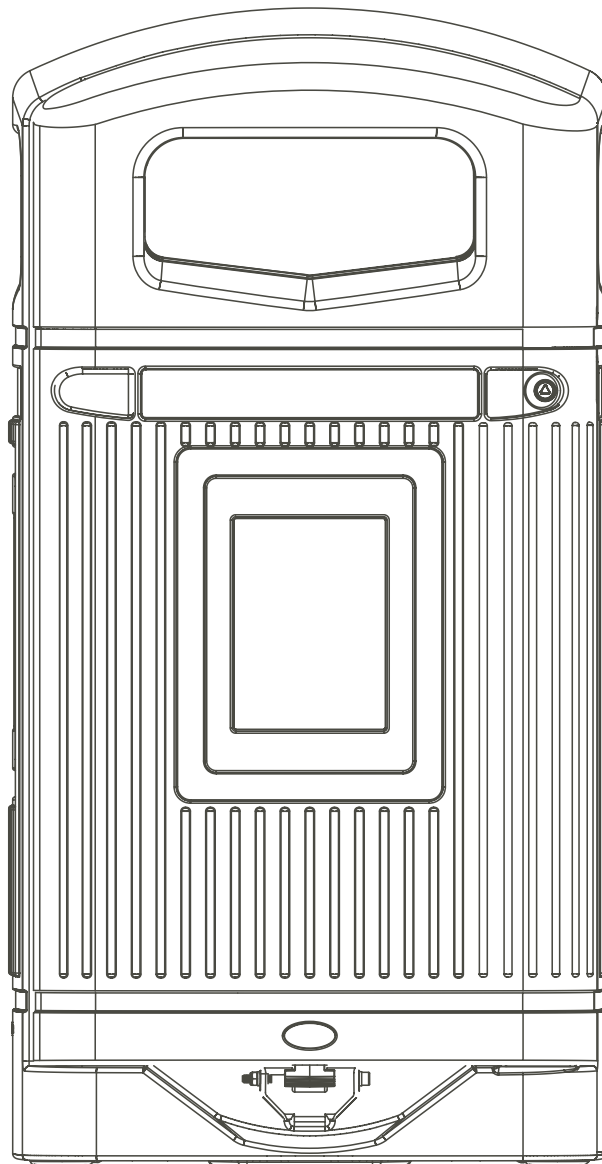

Glasdon Jubilee™

Operating Manual

NOTE: ENSURE THAT ALL RELEVANT PERSONNEL READ THE POINTS LISTED WITHIN THIS LEAFLET AND THAT A COPY IS GIVEN TO STAFF INVOLVED WITH THE INSTALLATION AND MAINTENANCE OF THIS PRODUCT.




IMPORTANT NOTE: THE TRASH CAN MUST BE SITED ON LEVEL GROUND TO ENSURE CORRECT ALIGNMENT OF THE DOOR AND BODY. IF YOU ARE NOT USING GLASDON FIXINGS YOU MUST ENSURE THAT 50-MILLIMETER DIAMETER WASHERS ARE USED IN ORDER TO SECURE THE TRASH CAN WHEN GROUND FIXING.




Opening/Closing your Keyed Version




Insert key into key hole and place hand into handle recess as shown.

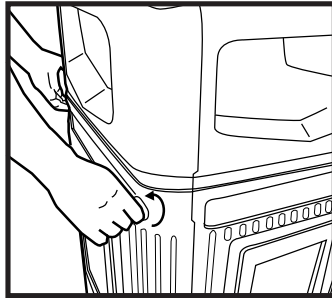

Turn the key counter-clockwise until it stops.

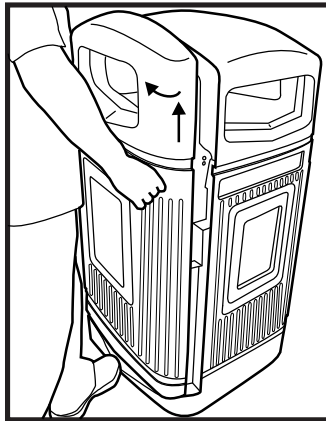


Using the handle lift the door and allow door to pivot open.

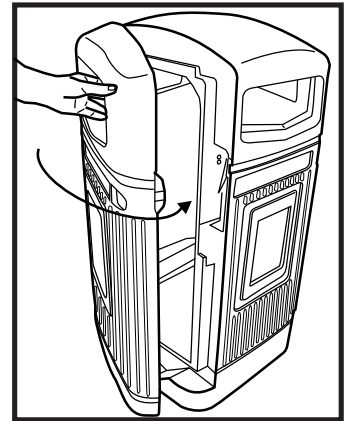

Slam to shut.


Opening/Closing your Keyless Version

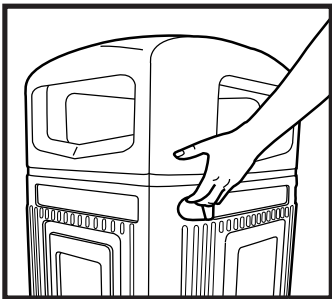


Place hand into handle recess as shown.



Place foot into base recess and push pedal upward with toecap to operate foot pedal.

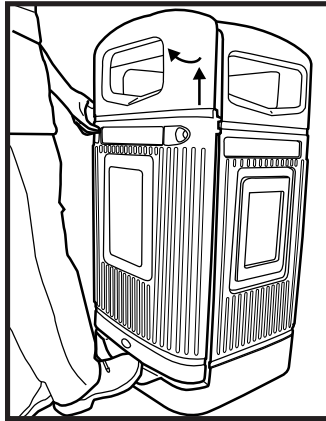


Using handle and foot to assist, lift door and allow door to pivot open.

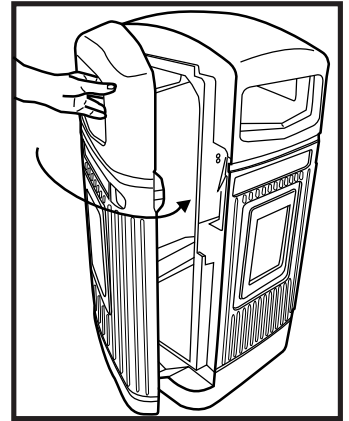


Slam to shut.


Removing Trash Liner/Using Liner Retention.

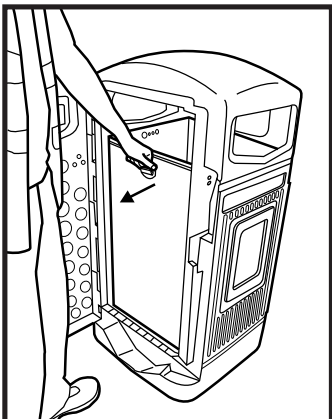


Remove liner bag by sliding out of trash can.

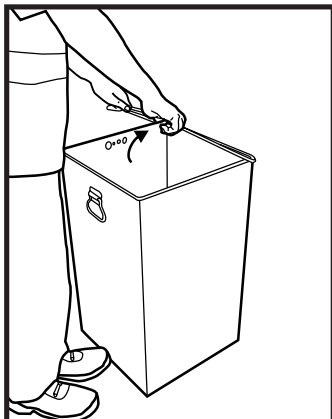

Release elasticized liner band **away from body for safety.**

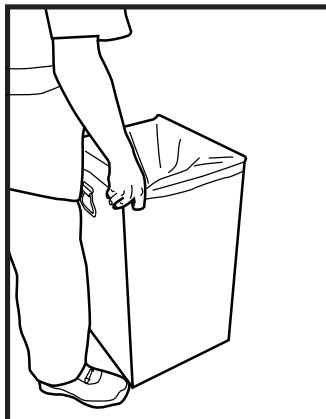


Insert new liner bag.

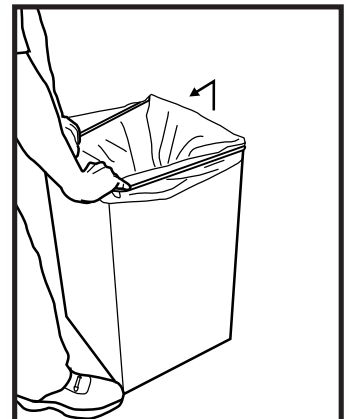


Reposition elasticized liner band to secure new liner bag.


Inserting/Removing Bait Box (Max. size bait box 15^{3/4} x 9^{1/2} x 5 inches or 22^{1/2} x 7^{1/2} x 5 inches) Depending on orientation of box

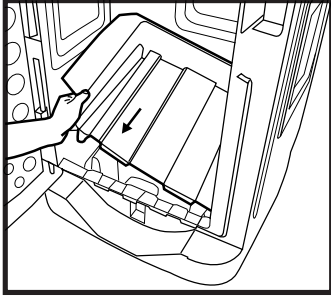

Remove the liner tray by pulling past lugs on trash can body.

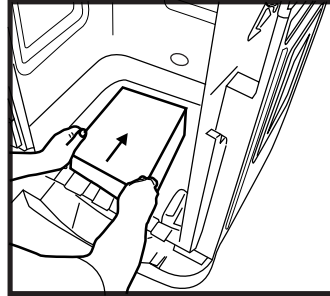


Insert bait box into position with the aperture facing the rear of the trash can.

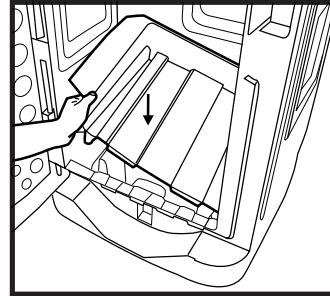


Reposition liner tray by pushing past the lugs so that it snaps into place.


Inserting/Removing Poster (Accepts laminated paper/card with a visible viewing area of 10 x 7^{1/2} inches)

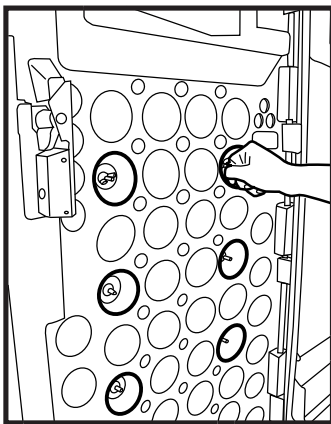

Remove all six wing nuts and washers from the inside of the trash can by unscrewing counter-clockwise.

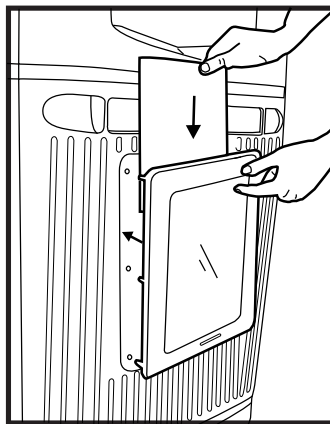


From outside the trashcan, remove the frame and insert. Replace poster behind the clear panel.

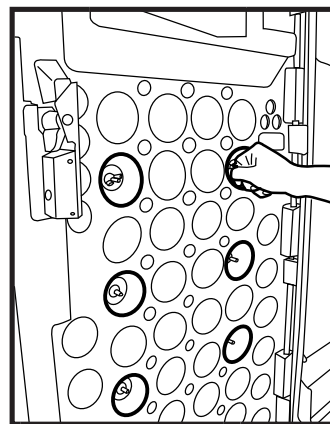


Place frame back into position and tighten wing nuts from inside the trash can to secure.

IMPORTANT NOTE: Do not over tighten wing nuts.


Removing/Replacing Aperture Panels

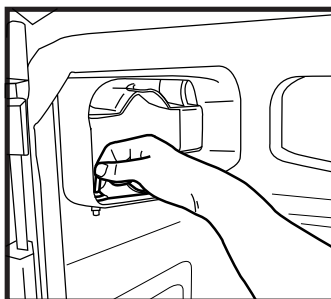


Using an M8 security allen key, unscrew and remove 3 screws and washers.

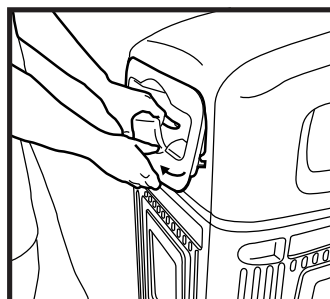

From outside the trash can, pivot the panel forward from base then pull downward to remove.

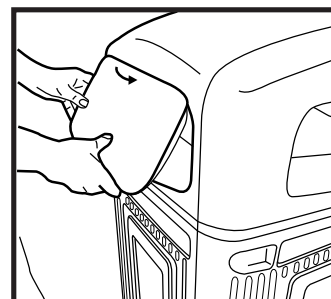

To insert a panel, position top bosses of the panel into holes in the body then push panel into position.

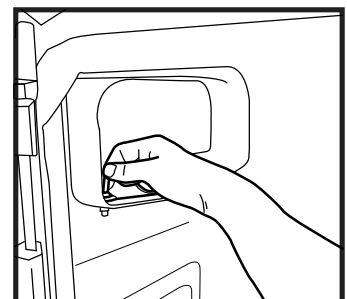


Using an M8 security allen key, replace washers and screws and tighten to secure.

Cleaning Your Trash Can

We would recommend a warm pressure wash with soap or alternatively hand wash with 10% solution of mild detergent in warm water using a soft bristle brush followed by a rinse with clean water.


Cleaning Liner Tray

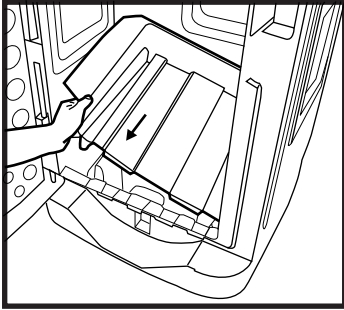

To aid cleaning, the liner tray can be removed to empty any debris that may have fallen out of the metal liner. Reservoirs in the liner tray can be easily emptied and wiped clean.

NOTE: FOR INSTALLATION AND ASHTRAY INSTRUCTIONS PLEASE SEE SEPARATE INSTRUCTION MANUALS.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON, Inc.
- GLASDON, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modifications or misuse of the product.

 **Glasdon** AND GLASDON JUBILEE ARE TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES

