





Topsy 2000™ With Keyed Lock System

Operating Instructions

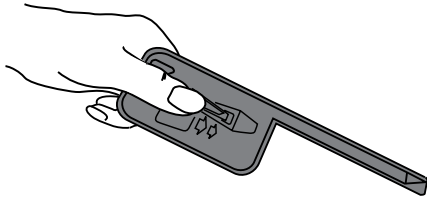


1. Ensure illustration is uppermost.


2. Insert the key all the way into the lock. (Do not turn the key.) This will automatically release the locking mechanism.

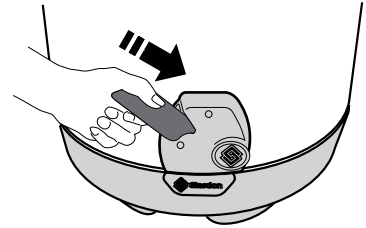


Important: Prior to installation or ballasting, it may be necessary to restrain the base from spinning when removing the Hood. See note A.

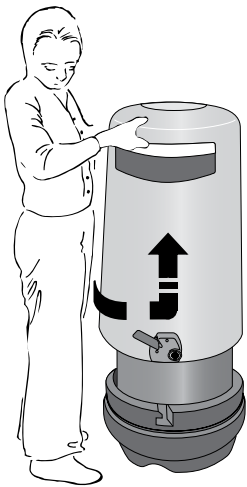

3. With the key still in position, turn trash can body counter-clockwise, and lift trash can body over liner. the locking mechanism.

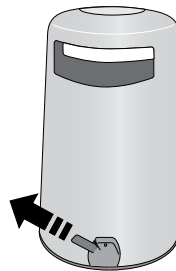

4. Remove the key at this stage.

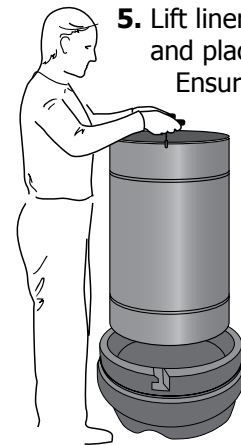

5. Lift liner out of base, empty and place back into base. Ensure handles drop outside of the liner.



6. Lift trash can over liner and lower to rest on base; turn trash can body clockwise to lock.

PLEASE NOTE

- A. Glasdon recommends ALL TOPSY 2000 trash cans be ground fixed or ballasted to maximize the performance of the unique locking system.
- B. Prior to bolting the base to the ground, rotate the complete unit until the trash apertures are in the preferred alignment.
- C. Regular cleaning is essential to maintain the pristine appearance of this quality product. All surfaces of the unit should be regularly cleaned with warm, soapy water and thoroughly rinsed. This is important in maintaining both the outward appearance of the product and ensuring ease of operation.



Glasdon AND TOPSY 2000™ ARE TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES

Any damaged components should be replaced. Spare are available direct from Glasdon, Inc.

Glasdon, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modification or misuse of the product.



Glasdon

Glasdon, Inc.