




1.5L ASHMOUNT™ POST MOUNTING KIT

Assembly Instructions

IMPORTANT NOTE: ENSURE THAT ALL RELEVANT PERSONNEL READ THE POINTS LISTED BELOW
AND THAT A COPY IS GIVEN TO STAFF INVOLVED WITH THE INSTALLATION.

PARTS LIST :-

1. C-Bracket	x2
2. M8 Bolt	x4
3. M8 Nut	x2
4. 13mm Wrench	x1

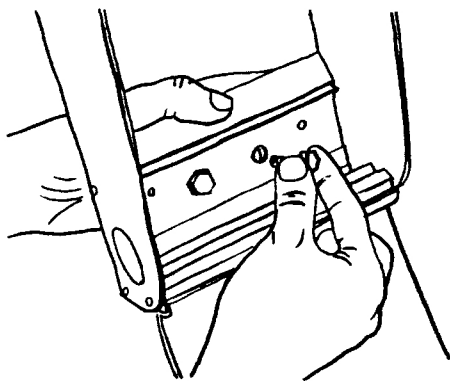

(fig 1a)


1. Open the Ashmount door.

2. Remove the liner.


3. Using two of the bolts provided, fasten the **lower** C-Bracket to the back of the Ashmount.

(fig 1b) shows the position and orientation of the bracket.

It is easiest if you begin fastening the bolts by hand (fig 1a), then tighten them both using the wrench.

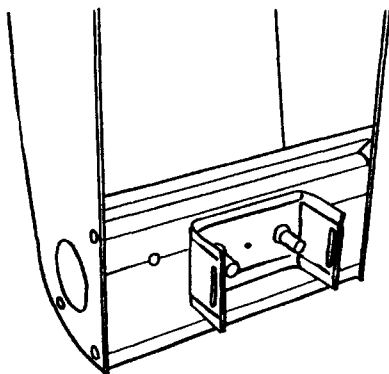


(fig 1b) Rear View

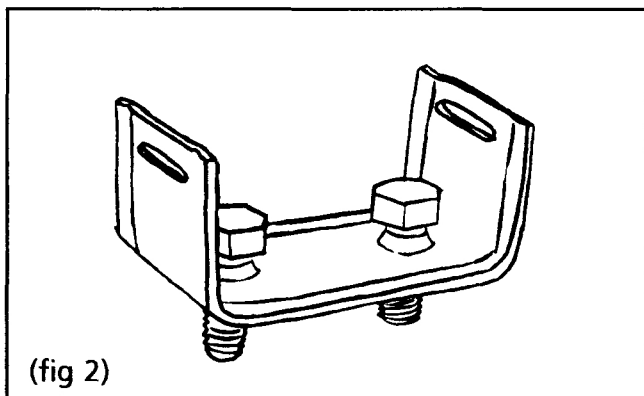

4. When fitting the top C-Bracket, the bolts should be threaded through the opposite way to those on the lower bracket.


Thread both bolts through the C-Bracket, as shown in (fig 2), before fitting it to the Ashmount.

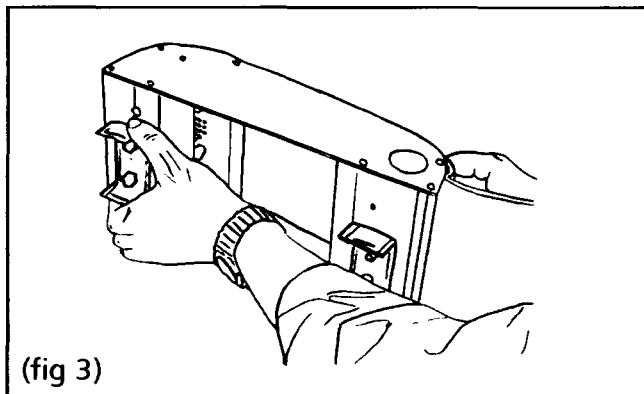

5. Lie the Ashmount on its side with the door open.

Fit the C-Bracket into the two holes at the top, as shown (fig 3).

Note: Lay the Ashmount on a soft surface to avoid marking the metal.

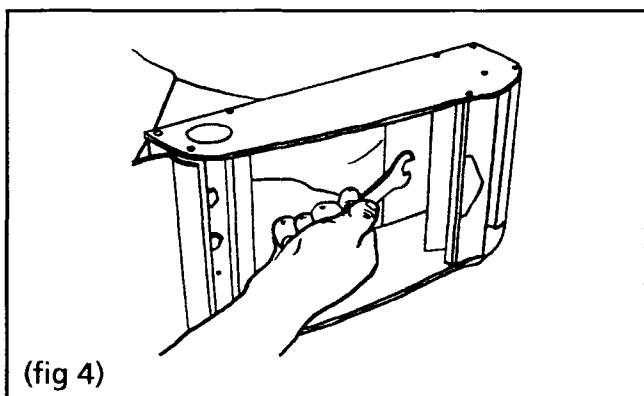

6. Secure the top C-Bracket in place using the two nuts.

Again, it is easiest to first fasten the nuts by hand, then tighten them using the wrench.

The Ashmount can now be fitted to a post using Tamtorque Banding or equivalent.
(sold separately)

 **Glasdon** AND ASHMOUNT ARE TRADEMARKS OR REGISTERED TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON, Inc.
- GLASDON, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modifications or misuse of the product.



Glasdon

Glasdon, Inc.

5200D Anthony Road
Sandston
VA 23150

Sales Inquiries: 1-855-USGLASDON

General Inquiries: 804-726-3777

Fax: 804-726-3778

E-mail: info@glasdon.com

Web: www.glasdon.com