


## C-Thru RECYCLING UNIT


## OPERATING AND ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE: ENSURE ALL RELEVANT PERSONNEL READ THESE INSTRUCTIONS PRIOR TO OPERATION.


## **LINER INSTALLATION**




**1.1** Ensure the illustration on the key is uppermost.

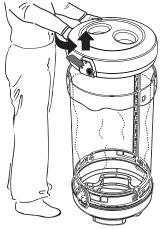


1.3 With the key still in position, turn hood counter-clockwise, then lift hood off. Remove the key.



**1.2** Push the key all the way into the lock.(Do not turn the key). This will automatically release the locking mechanism.

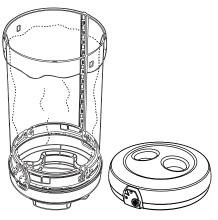


1.4 Place a clear sack into the body and hook over the rim with approximately 2 inches overhang.

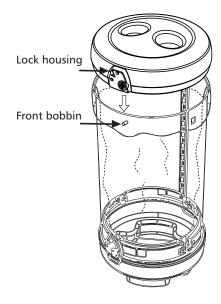


**1.5** Place the hood onto the body and align the lock housing with the front bobbin by turning the hood. Push the hood firmly downward to automatically lock the unit.

## 2. **UNIT DISASSEMBLY**

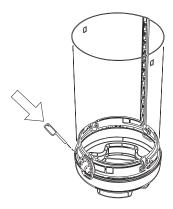

2.1 Remove hood as (1) above, remove sack if present. Insert the plastic key into the lock.




2.2 Hold the body with both hands, twist counter-clockwise and lift away from the base. Remove the key and keep safely.

**SAFETY NOTE:** We would recommend wearing safety gloves as the edges of the interlocking mechanism






2.3 To disassemble the body place on a well-protected and soft surface, joint uppermost. Push down either side of the interlock to disconnect the tabs, and allow the sheet to spring flat.

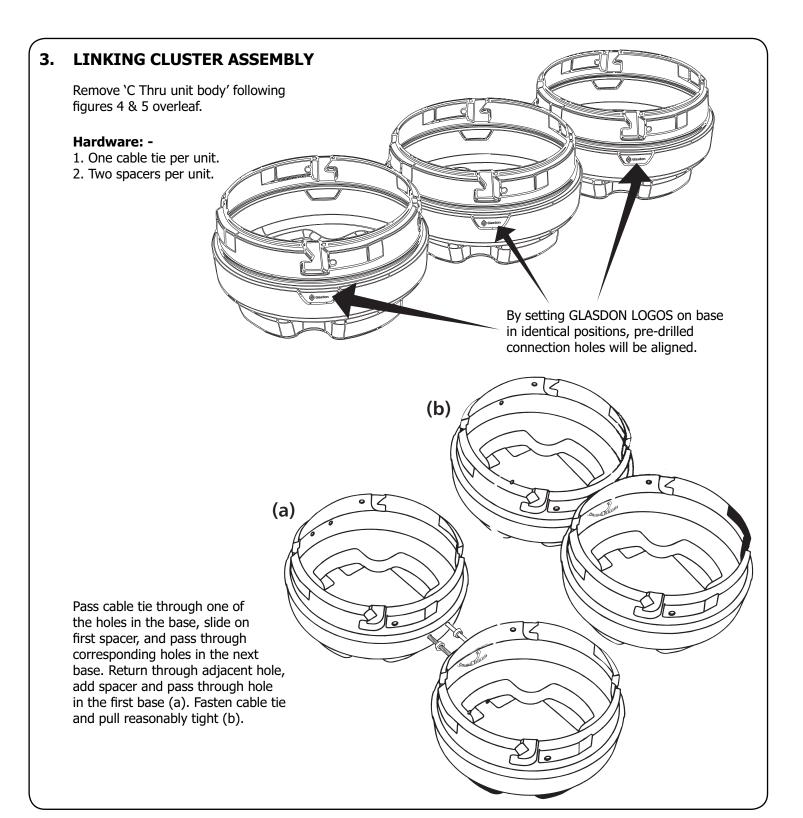

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON, Inc.
- GLASDON, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modifications or misuse of the product.



Issue 1 Aug. 2011 Stock no. C000/0237

©Copyright August 2011

Glasdon, Inc. reserves the right to alter specifications without prior notice.

