


# **NEXUS<sup>®</sup> 8G OPERATOR INSTRUCTIONS**

**IMPORTANT NOTE:** ENSURE ALL RELEVANT PERSONNEL READ THESE INSTRUCTIONS PRIOR TO OPERATION.

### **OPENING YOUR NEXUS 8G**




Using finger lip at front of lid, lift lid upwards.

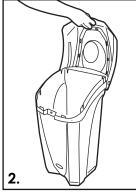

Lift lid to upright position until it is held by stay feature.

# LOCKING/UNLOCKING YOUR NEXUS 8G

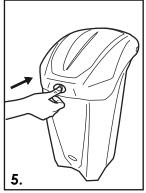


The Confidential Paper model comes complete with push lock located on front of container. With lid closed, push lock centre to lock unit.



Using key provided unlock container. (Lock is available as an optional extra on all models.)

# **SECURING SACK IN POSITION**

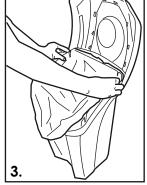


With lid open, install correct size sack (approx 13 " x 21" x 23<sup>1</sup>/<sub>2</sub> " available from Glasdon) by firstly hooking onto retention luas at back of container.

## **EMPTYING YOUR NEXUS 8G**




Open lid as shown above.

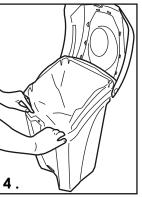


Stretch sack and hook over side and front lugs so that sack does not over hang body of container. Close lid securing sack in position.



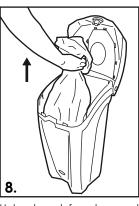


Unhook sack from lugs and lift sack out of container.

### **INSERTING GRAPHIC**

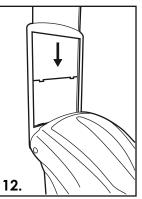


Place graphic behind clear polycarbonate sheet and slide into graphic holder so that lugs locate into slots along bottom of graphic holder.


# ATTACHING A GRAPHIC HOLDER TO YOUR NEXUS 8G

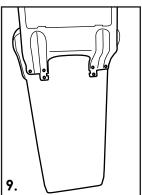


Open lid and position graphic holder at rear of container so that the holes are aligned with holes in container.

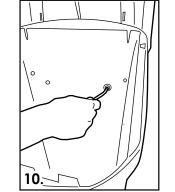


From inside of container, place 4 off screws with washers provided through holes and fix on back of container with washers and nyloc nuts (using your fingers.) Using a 10mm wrench and allen key tighten nuts until secure.

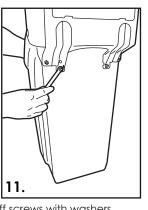


# PERMANENT WALL FIXING KIT

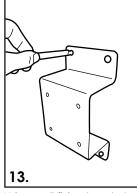


Using wall fixing bracket as template, mark out 4 off drill holes at top and bottom of bracket.

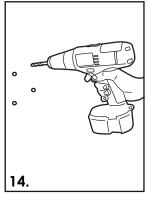

Using a 7mm diameter masonry bit, drill 4 off holes into wall. Place a plastic anchor provided into each drilled hole.

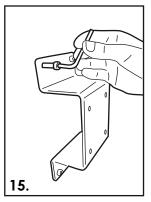


Align wall fixing bracket with drilled holes and screw 4 off M5.5 x 50mm screws provided into wall using security allen key.

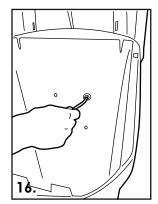


Holding container up to wall bracket, place 4 off M6 x 16mm screws and washers provided through holes on inside of container and fix with nyloc nuts using your fingers. Using a 10mm wrench and allen key provided tighten nuts until secure.


# LIFT OFF WALL FIXING KIT

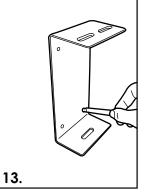


Using wall fixing bracket as template, mark out 4 off drill holes at top and bottom of bracket.

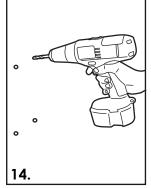

Using a 7mm diameter masonry bit, drill 4 off holes into wall. Place a plastic anchor provided into each drilled hole.

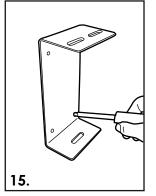


Align wall fixing bracket with drilled holes ensuring two slots are positioned at top and single slot at bottom. Screw 4 off 1.5'' screws with washers (provided) into wall using a screw driver.

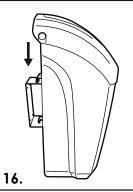

With the 3 off brackets already attached to the container, hook the container onto wall bracket so that the hooks locate into the slots.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON, Inc.
- GLASDON, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modifications or misuse of the product.



Issue 3 August 2011 C000/0382 ©Copyright 2013



5200D Anthony Road Sandston VA 23150

Sales Inquiries: 1-855-USGLASDON General Inquiries: 804-726-3777 Fax: 804-726-3778

E-mail: info@glasdon.com Web: www.glasdon.com