




ECO NEXUS[®]

OPERATOR INSTRUCTIONS


IMPORTANT NOTE: ENSURE ALL RELEVANT PERSONNEL READ THESE INSTRUCTIONS PRIOR TO OPERATION.

OPENING YOUR ECO NEXUS

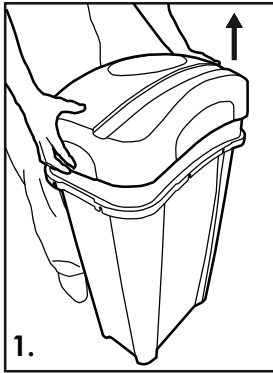


1. Using finger lip on both sides of lid, lift upwards and off body of container.

SECURING SACK IN POSITION

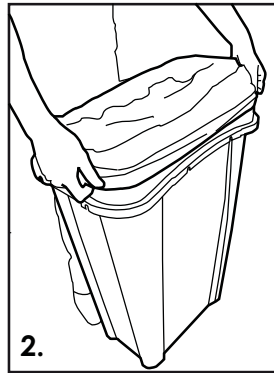

2. Install correct size sack (approx 16" x 28 1/2" x 40" for both container sizes, available from Glasdon) by stretching over upper part of body.

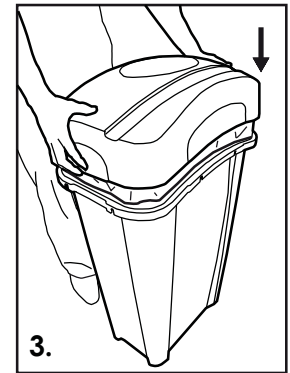


3. Place lid back onto body ensuring that sack is neatly secured underneath lid.

EMPTYING YOUR ECO NEXUS




4. Remove lid (as detailed above).

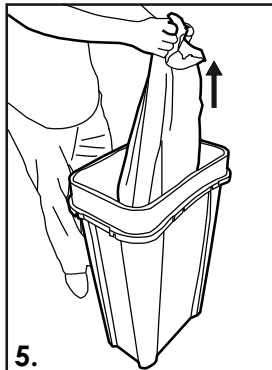


5. Release sack from body and lift out of container.

UNLOCKING YOUR ECO NEXUS

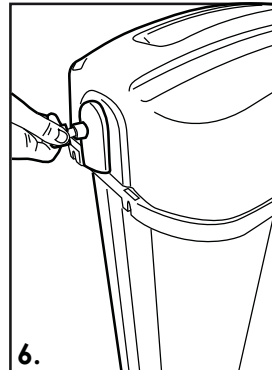


6. The confidential paper model comes complete with push lock. Using key provided turn in lock to open.


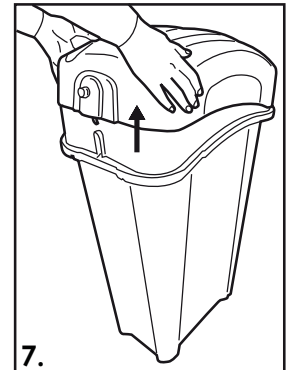


7. Lift push lock end of lid upwards followed by opposite end. Lift lid off container completely.


LOCKING YOUR ECO NEXUS

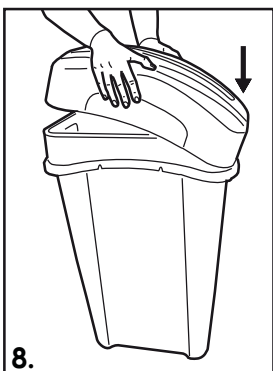

8. First, place end of lid opposite to push lock onto container body ensuring that pin locates into slot within body (see above).

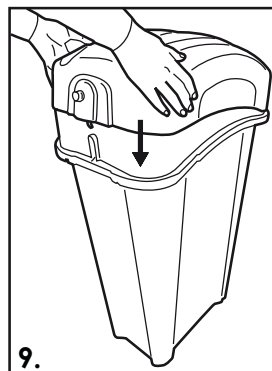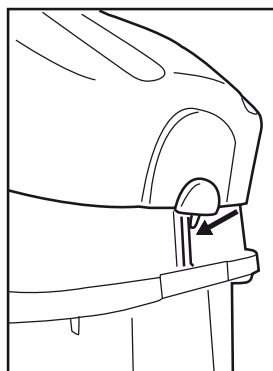


9. Push lock end of lid downwards so that front pin locates into slot within body.

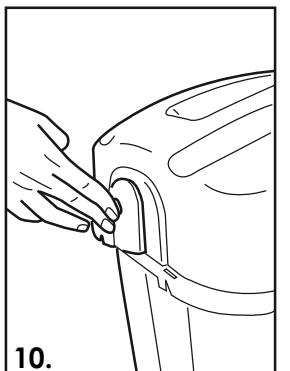


10. Finally, push lock center inwards to lock container.


ATTACHING A GRAPHIC HOLDER TO YOUR ECO NEXUS

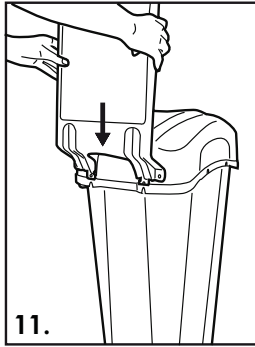


11. Push graphic holder into slots provided on either front or side of container.

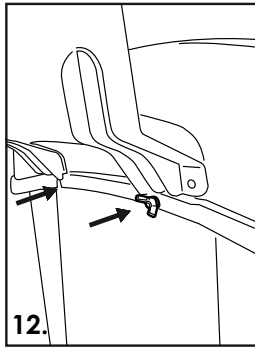

12. Push 1 off screw with washer provided through each hole in lip of body so that screw is protruding outside of container. Place a second washer over each screw and secure in position with wing nuts provided.

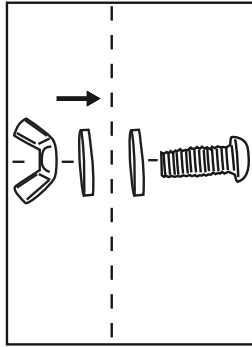


INSERTING GRAPHIC

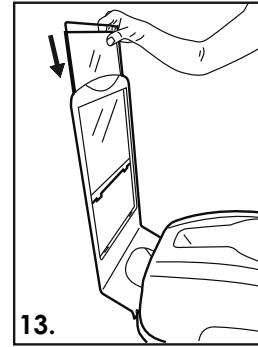


13. Place graphic behind clear polycarbonate sheet and slide into graphic holder so that the lugs locate in the holes along the bottom of the graphic holder.


EMPTYING/REPLACING CUP BANK RESERVOIR

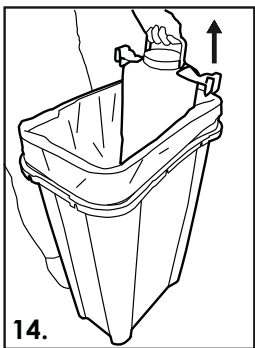


14. Remove lid (see fig. 1). Lift reservoir out of body using handle and tip contents away.

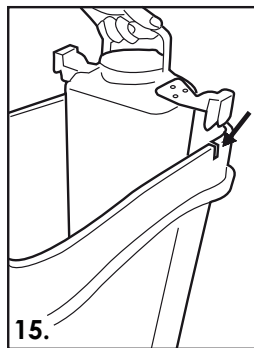


15. To replace reservoir, locate reservoir holders into slots on rim of container body. Replace lid ensuring funnel is located over reservoir.

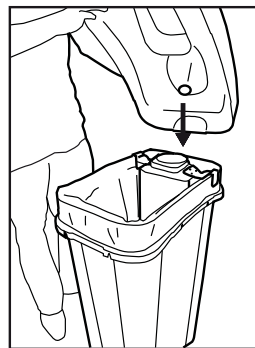


ATTACHING WHEELS TO YOUR ECO NEXUS

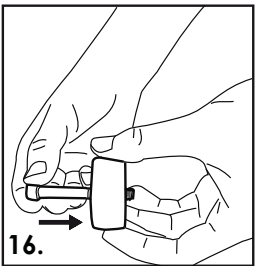


16. From kit provided, place 1 off screw through a wheel.

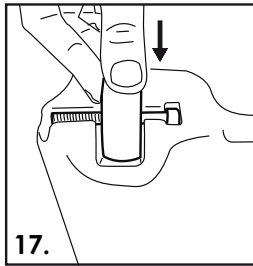

17. Turn container body upside down and click screw and wheel into molded slot. Repeat with second wheel.

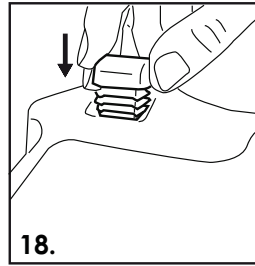


18. Push 2 off socket caps into molded recesses opposite wheels.

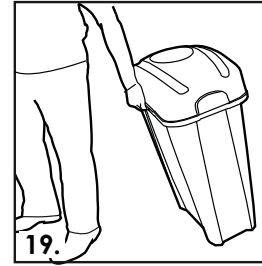

19. Using lip on body as a handle, tilt container onto wheels to maneuver container around.

- A planned maintenance schedule of regular inspection is recommended, replacing components as necessary.
- Replacement components are available direct from GLASDON, Inc.
- GLASDON, Inc. cannot be held responsible for claims arising from incorrect installation, unauthorized modifications or misuse of the product.

 **Glasdon** AND NEXUS® ARE TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES



Glasdon

Glasdon, Inc.
5200D Anthony Road
Sandston
VA 23150

Sales Inquiries: 1-855-USGLASDON
General Inquiries: 804-726-3777
Fax: 804-726-3778

E-mail: info@glasdon.com
Web: www.glasdon.com